

3007

QUICK SHARP

 
- Ergonomic side edge sharpener
- Pocket size, «on the slope» use also
- Easy handling, steady grip, maximum accuracy
- Best results, minimum effort
- Right and left hand use
- For ski and snowboard
- Spare file 40 mm **5105**




3009

QUICK SHARP KIT

- Ergonomic side edge sharpener
- Pocket size, «on the slope» use also
- Easy handling, steady grip, maximum accuracy
- Best results, minimum effort
- Right and left hand use
- For ski and snowboard

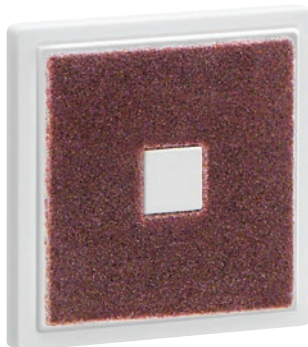

 STEP 1 ZIRCONIUM:
to remove rock damaged spots and burrs before using the file.
(Spare part **5140**)

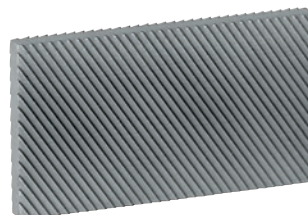

STEP 2 FILE:
to sharp and set up the side edge angle.
(Spare part **5105**)



STEP 3 DIAMOND:
to polish and super finish the ski and snowboard edges.
Best if used with water or with a polishing solution.
(Spare part **5160**)